



1. Take away the bottom cover and loosen up the two screws inside.

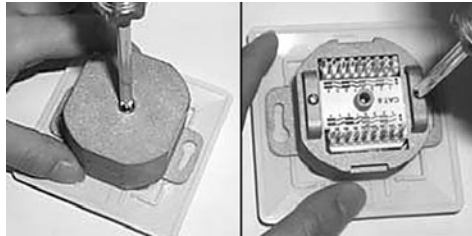

2. Strip approximately 30mm of the cable jacket, and separate to 4 pair each.

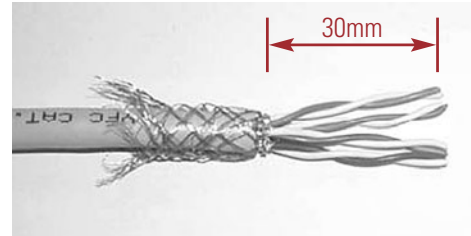

3. Follow the color-coding to position T568A or T568B wiring.

## T568A

**Pin 1** White/Green

**Pin 2** Green

**Pin 3** White/Orange

**Pin 4** Blue

**Pin 5** White/Blue

**Pin 6** Orange

**Pin 7** White/Brown

**Pin 8** Brown

## T568B

**Pin 1** White/Orange

**Pin 2** Orange

**Pin 3** White/Green

**Pin 4** Blue


**Pin 5** White/Blue

**Pin 6** Green

**Pin 7** White/Brown

**Pin 8** Brown

4. Use the KRONE impact tool to punch down and connect the wires.

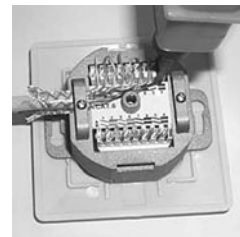

5. Fasten the screws to secure both the braid and the cable jacket.



6. Then assemble the bottom cover with the screw. Then complete the installation.

